

Important Information

Battery Replacement

The digital safe uses four AA type batteries (supplied). The battery life is approximately one year. If the red LED and green LED illuminate simultaneously when the correct PIN is entered the batteries require replacing immediately. The battery hatch is located on the back of the door (see Dia 5). The battery cover (see Dia 2) can be removed by sliding it to the left (see arrow marking on cover).



Dia 5

Note:

The keypad becomes inoperable when the batteries are removed. When replacing batteries ensure that the polarity is correct. Make a note of the battery replacement date, they should last approximately one year. However, we recommend checking the batteries every 6 months just to make sure. If power is removed from the safe the set PIN code will only remain in its memory for a possible 4 hrs,

CAUTION: The safe is not fire proof.

If faults cannot be remedied, contact the Helpline on 020 83916767
helpline@hilka.co.uk

Hilka Pro Imports
1 ROEBUCK PLACE, ROEBUCK ROAD, CHESSINGTON, SURREY KT9 1 EU

701-5359 - Issue 1 - R.W. 22-07-08

 
CHALLENGE

Digital Home Safe 701-5359



Operating the Digital Home Safe

Important : Please read the instructions thoroughly before beginning the set-up procedure.

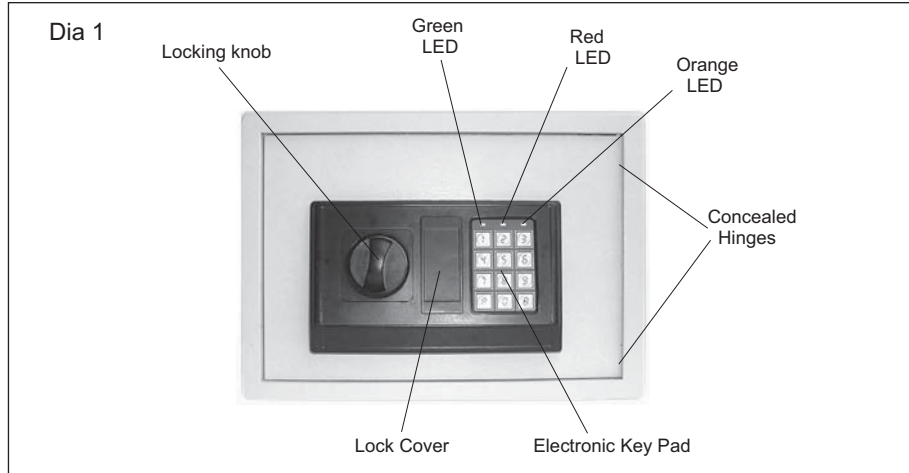

Operating Instructions

Note: Please make sure that after you have opened the safe for the first time, you change the PIN, for security reasons.

OPERATING THE SAFE FOR THE FIRST TIME

- Use the Manual override key to open the safe for the first time,
 - Remove the plastic key lock cover (Dia 1)
 - Insert the override key, turn to the left and at the same time turn the safe handle to the right and open the safe .
- Remove the battery cover on the rear of the door (Dia 3) and install the 4X AA type batteries supplied, in the back of the safe door, as shown in Dia 5 and replace the battery cover.

3. While the door is open familiarise yourself with the door opening procedure, and leave the door open until you are happy with the method of opening the safe door. To set the safes PIN code for the first time please follow these instructions.

Remove and retain the white cap covering the red reset button (located at the back of the door, see Dia 2 & Dia 3)

Press red reset button once

Press '159159' on the keypad as a code

Press 'B' once

The PIN code has now been set to '159159'.

Replace the white cap over the reset button (for security reasons).

 
To open the safe using the PIN code:

Press 'B' once


Press '159159'

Press 'B' once

The green LED will come on, the door internal lock will disengage and you can now turn the door knob clockwise and open the door.

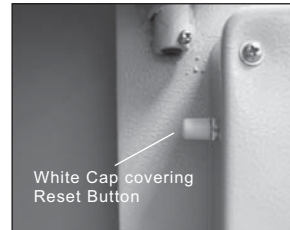

Dia 2

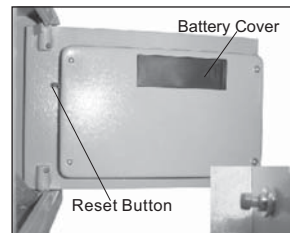 

Dia 3

Operating the Digital Home Safe

- Refit the plastic key cover and place the override keys in a safe place (NOT IN THE SAFE) for emergency use.

WARNING: NEVER keep the override keys inside the safe.

Programming Your Personal identification Number (PIN)

- With the door open, remove the white cap (Dia 2) and depress the red reset button (Dia 3) located at the back of the door near the top hinge.
- A beep will be heard and the orange LED will illuminate. Key in your new PIN (any combination of numbers from 3 to 8 digits) then press "B". Be sure to write down this PIN number so you do not forget.
- The safe will now lock when you close the door and turn the knob anti-clockwise.
- To open the safe again, Press the "B" button then your PIN number followed by the "B" button, you can now open the safe door by turning the knob clockwise.

Note if the incorrect PIN is entered the keypad will freeze for 20 seconds

- To alter the PIN at any time follow the steps in instructions above
- Screw the white cap back onto the red reset button when your pin has been reset for security reasons.

CAUTION:

If an incorrect PIN is entered the safe will not open and three warning beeps will be heard. Entering an incorrect PIN three consecutive times will freeze the locking mechanism and keypad for 20 seconds during which time you will not be able to operate the safe.

Opening Safe with Key

You can use the manual override key to open the safe and reset your PIN. **DO NOT** keep the override key in the safe.

 
- To use the key, remove the small lock cover in the centre of the control panel.
- Turn the key anticlockwise, then the doorknob clockwise, and the door will open. Please keep the keys in a secure place, as we do not supply replacement keys, for security reasons.

Securing your Safe

You may wish to secure your safe to a fixed part of the house (i.e. a steel panel or wooden beam). This can be achieved by using the four bolts supplied. Insert the bolts through the 4 pre-made holes on the back or bottom of the safe. (See Dia 4).

Note:

Bolts are packed inside the safe (on the mat). When fitting the bolts ensure that the nuts are on the inside of the safe.

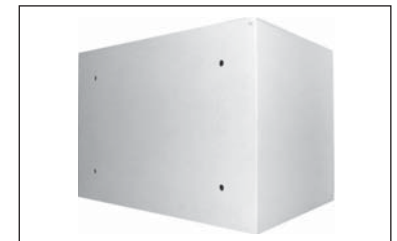

Dia 4